




# iRobot Braava 320 Body Shell Replacement

Replace your cracked or broken body shell and control panel to restore the aesthetics of your robot.

Written By: Adam Lewis

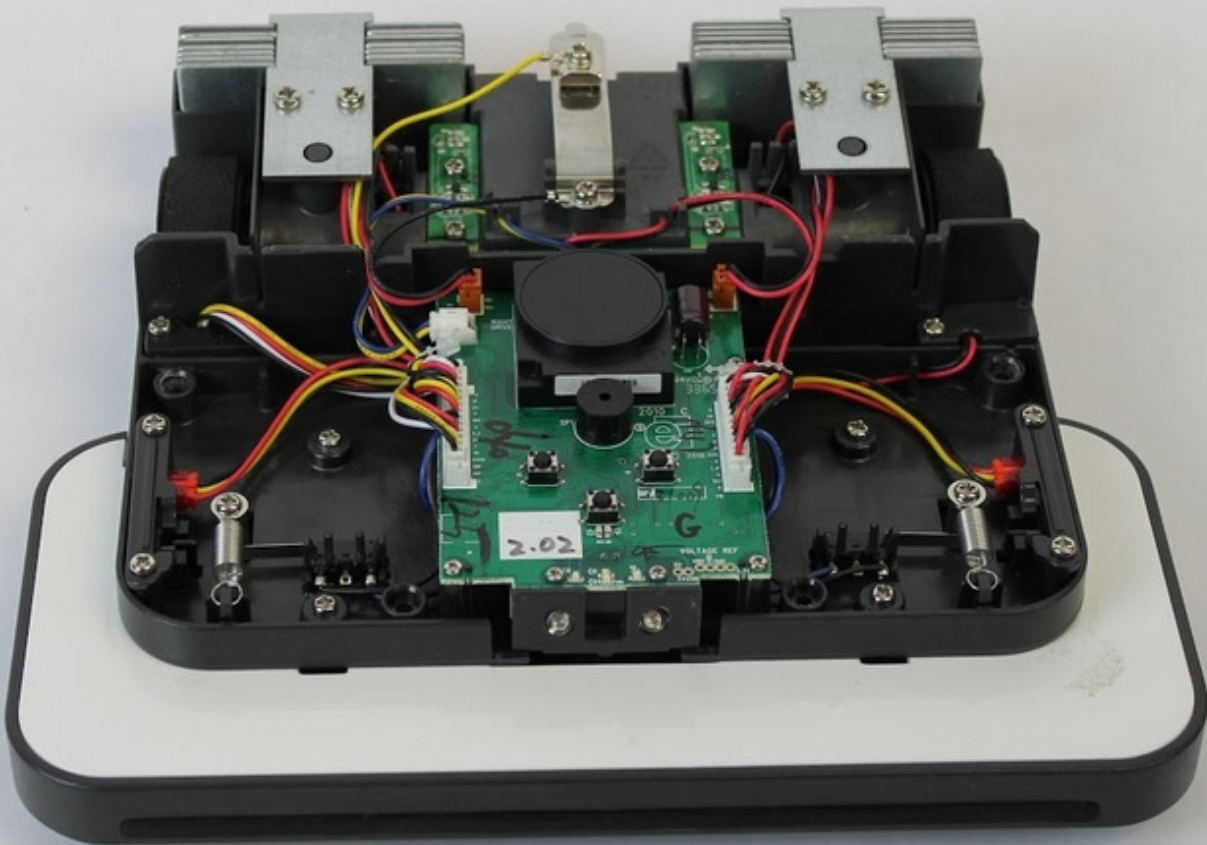

## INTRODUCTION

Although a cracked or broken body shell may not hinder the performance of your Braava, replacing it will help restore the cosmetic beauty of your device. It is a simple and straight forward replacement, requiring only four exposed screws to be removed.

---



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [Flathead Screwdriver](#) (1)
-

## Step 1 — Battery



- Flip your device over and locate the battery cover.
- ⓘ The battery cover is located in the center of the device in between both wheels.

## Step 2



- Using a Flathead #4 screwdriver, gently turn the 12mm screw that holds the battery cover in.
- ⓘ The screw does not remove, it stays attached to the cover.

## Step 3



- Gently remove the battery from the tray and disconnect the battery cable.
    - To remove the battery, pull it straight up. To disconnect the cable, gently pull it straight out of the connector.
- ☞ To reinstall the cable, hold it near the end and gently push it in the connector.


## Step 4 — Body Shell and Control Panel



- With the battery removed, rotate your device so the front of it is facing you.
- Remove the four 10mm Phillips #2 screws that attach the shell.



## Step 5

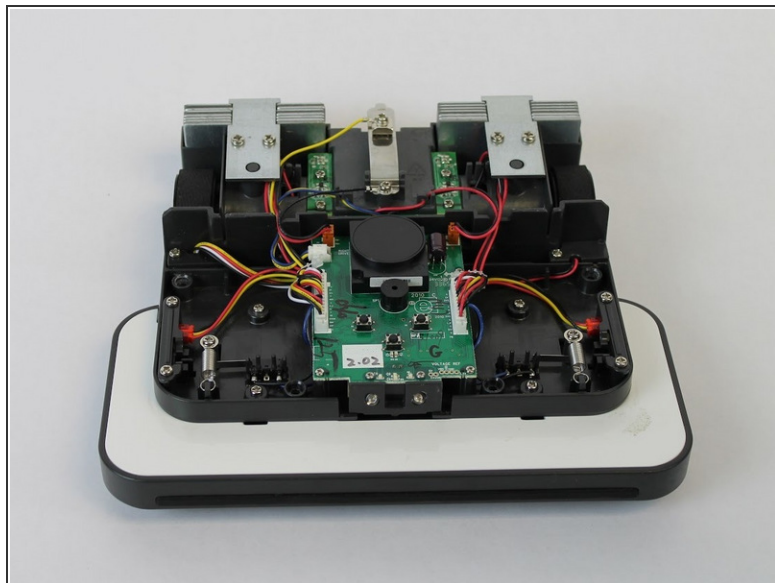

- Using both hands, hold the device together while you flip it over.
- Starting from the front, gently lift up the shell and slowly tilt back until it is fully removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-02 12:04:13 AM.